

Installation instructions for marine heater T2RIB

The heater must be installed by authorized electricians, and in a horizontal position on the wall.

1. Fasten the heater to the wall. Screws are provided
2. Remove the thermostat knob and the front cover of the distribution box.
3. Connect to a 4-pole terminal.
4. Connect the earth lead to the earth sign on terminal.
5. Replace the front cover and put the thermostat knob back in place

Installation distance requirements:

Minimum distance to side wall: 2,0 cm.

Minimum distance to floor: 2,0 cm.

Minimum distance to roof or window sill: 38,0 cm.

The heater must not be located immediately below a socket outlet.

Heaters used in bathrooms must be installed so that switches and other controls cannot be touched by a person in the bath or shower.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance

WARNING: *In order to avoid overheating, do not cover the heater.*

Type	Power	A	B	L ₁	L ₂	H	Height incl. grille
T2RIB 025	250 W	96 mm.	Min. 20 mm.	379 mm.	285 mm.	150 mm.	238 mm.
T2RIB 03	300 W	96 mm.	Min. 20 mm.	379 mm.	285 mm.	150 mm.	238 mm.
T2RIB 04	400 W	96 mm.	Min. 20 mm.	379 mm.	285 mm.	150 mm.	238 mm.
T2RIB 08	800 W	96 mm.	Min. 20 mm.	629 mm.	535 mm.	150 mm.	238 mm.
T2RIB 12	1200 W	96 mm.	Min. 20 mm.	869 mm.	775 mm.	150 mm.	238 mm.
T2RIB 16	1600 W	96 mm.	Min. 20 mm.	1134 mm.	1040 mm.	150 mm.	238 mm.
T2RIB 20	2000 W	96 mm.	Min. 20 mm.	1395 mm.	1295 mm.	150 mm.	238 mm.

